

COMPUTER SYSTEM DESCRIPTION LANGUAGE—CSDL

**A Thesis Submitted
in Partial Fulfilment of the Requirements
for the Degree of
MASTER OF TECHNOLOGY**

**By
ANANT M. KURKURE**

to the

**DEPARTMENT OF ELECTRICAL ENGINEERING
INDIAN INSTITUTE OF TECHNOLOGY KANPUR
AUGUST, 1976**

RESEARCH
CENTRAL LIBRARY

Acc. No. 46953

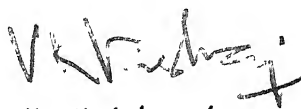
30 AUG 1976

EE-1976-M-KUR-COM

CERTIFICATE

This is to certify that the thesis entitled,
'COMPUTER SYSTEM DESCRIPTION LANGUAGE', is a record of
the work carried out under my supervision and that it
has not been submitted elsewhere for a degree.

Kanpur
August, 1976.


V. K. Vaishnavi
Lecturer in Computer Sciences,
Indian Institute of Technology, Kanpur.

POST GRADUATE OFFICE
This thesis has been approved for the award of _____ of Master of Technology (M.Tech.) in accordance with the regulations of the Indian Institute of Technology, Kanpur.
13.0.76 2

--: TO MY LOVING MOTHER:-

A C K N O W L E D G E M E N T S

I would like to express my deep sense of gratitude to my thesis supervisor, Dr. V.K. Vaishnavi, for his sustained interest in the work, constant encouragement, guidance and kind help in innumerable ways. He always devoted his invaluable time to this work for long sessions of discussions.

My regards are due to Dr. V. Rajaraman, Dr. H. V. Sahasrabuddhe, and Dr. K.P.R. Prabhu for their helpful suggestions and guidance.

The assistance given by the Staff, Computer Centre, I.I.T. Kanpur, is gratefully acknowledged.

I also take the opportunity to express my sincere gratitude towards my friends for the pleasant time I had while working here.

My thanks are also due to Mr. S.S. Pethkar for the diligent typing of the thesis in a short time.

Kanpur
August , 1976.

- A. M. Kurkure

COMPUTER SYSTEM DESCRIPTION LANGUAGE - CSDL

ABSTRACT

The need and purposes of a high level language to describe computer system behaviour at program level are discussed. Currently available computer description languages are briefly surveyed. A Computer System Description Language - CSDL is proposed for documenting computer systems' behaviour at program level. The language can be used as an input language to a systems simulator which simulates the system at instruction level. Computer systems TDC-316, IBM-1800 and IBM 7044 are described using CSDL.

- * -

CONTENTS

	Page
CHAPTER 1 : INTRODUCTION	1
1.1 Purposes of the Computer System Description Language	2
1.2 Requirements of the Computer System Description Language	3
1.3 Objectives and outline of the thesis.	4
CHAPTER 2 : A SURVEY OF SYSTEM DESCRIPTION LEVELS AND LANGUAGES	6
2.1 Behavioural, Functional and Structural Description.	6
2.2 Various Levels of Description	7
2.2.1 Register Transfer Level	8
2.2.2 Program Level	8
2.2.3 PMS Level	10
2.3 Procedural and Nonprocedural Languages	11
2.4 High Level Computer System Description Languages	12
2.4.1 RT-Languages	12
2.4.2 Languages Similar to Conventional Programming Languages	13
2.4.3 Instruction Set Processor (ISP)	14
CHAPTER 3 : COMPUTER SYSTEM DESCRIPTION LANGUAGE	17
3.1 The Language	17
3.1.1 System Declaration	18
3.1.2 Memory Elements Declaration	18
3.1.3 Procedure Declaration	22
3.1.4 Statement Part	22
3.2 Syntax of the Language	29
CHAPTER 4 : EXAMPLES AND JUSTIFICATIONS	34
4.1 TDC-316	34
4.2 IBM-1800	35
4.3 IBM-7044	35
4.4 JUSTIFICATIONS	36

	Page
CHAPTER 5 : CONCLUSIONS	38
REFERENCES	40
APPENDIX I	43
APPENDIX II	61
APPENDIX III	67

CHAPTER ONE

INTRODUCTION

A computer system can be described at circuit level, logic level (includes Register Transfer sublevel), program level and PMS level. (2, 3) . Circuit and logic levels except Register Transfer sublevel are well defined. Lot of current research is going on to standardise RT level of description. However even RT level is not suitable to describe large digital systems like computers. Therefore need arises to have a description language at a high level. Once such a high level language to describe the behaviour (1) of computer systems is developed then any computer system can be described at the behavioural level uniformly. Then it will be easy to learn different computer systems described in such a language and will also help in keeping track of old machines, which will be useful while designing a new system. Simulation of any computer system will also become easy, once the interpreter for such a language is available.

A Computer System Description Language (CSDL) is proposed in this thesis. The language is capable of describing the behaviour of the computer system at program level. Example systems TDC 316, IBM 1800 and IBM 7044 are described in the appendices using CSDL.

1.1 Purposes of the Computer System Description Language

There were three purposes kept in mind while developing CSDL. The language should serve as

- (a) Documentation language for computer systems.
- (b) Input language to a generalised simulator.
- (c) Teaching aid.

(a) CSDL as a documentation language for computer systems :

As described in the above paragraphs CSDL can describe the behaviour of computer systems. As it is only behavioural description, timing and concurrency need not be taken into account. Necessary comments to make the description more clear can be added using braces. To describe the behaviour of computer systems, all their basic instructions must be described. Thus CSDL description will be compact and concise. It will help in understanding the system in a short duration of time.

(b) Input Language to generalised simulator (Systems Simulator)

CSDL description will be equivalent to a program. If CSDL interpreter is available then any computer system behaviour at instruction level (22, 30) can be simulated. This will help in developing software for any proposed computer system whose specifications are laid down. Thus the complete debugged software for the proposed computer system will be available at the same time when its hardware is ready. This will avoid in

writing a simulator program for every individual machine for the development of the software, and thus will save time. This will be very important application in the sense that software costs about sixty percent of the total cost of the system.

(c) Teaching aid :

When an interpreter described in (b) above is available then it will also be helpful as a teaching aid in a course like Software Engineering. The student can himself describe the system of his interest in CSDL and simulate it on existing computer using CSDL interpreter. Then he can have an experience of developing the software starting from "Boot-strap technique" (22, 30).

1.2 Requirements of the Computer System Description Language :

The various desirable features the language should have are described below :

- (1) The language should be useful for documenting the existing and proposed computer systems' behaviour at program level. The notation should be useful as a conveyer among the human beings. It should be precise, concise and elegant. The language should be easy to learn and remember so that the documented computer system could be understood easily. Additional readability can be achieved by adding necessary comments. The whole description should look like a homogeneous program.

- (2) To achieve simplicity and familiarity, the language should have few primitive programming concepts and they should be used consistently throughout the description.
- (3) The language should be a general one. It should be independent of any machine organization, hardware technology etc. , because all of these factors do keep on changing.
- (4) The language should be procedural (1) and syntactically simple so that implementing it will become easy.
- (5) The language should be similar to other programming languages like FORTRAN IV, ALGOL, PL/I etc. It should be at program level.
- (6) The language should have terminology parallel to hardware terminology.

1.3 Objectives and Outline of the thesis :

The objective of this thesis is :

To come up with a procedural computer description language to describe the behaviour of computer systems at the programming level, which could also be used as an input language to a generalized simulator (CSDL interpreter) to simulate the described computer system at instruction level.

Outline of the thesis :

Chapter 2 : This chapter deals with various levels of system description. A brief survey of the existing languages at programming

and higher levels is presented.

Chapter 3 : This chapter defines and describes the Computer System Description Language. It also includes its syntax specifications.

Chapter 4 : This chapter explains in brief the various examples of system description given in the appendices and justifies the purposes, objectives and requirements that are set to in this chapter.

Chapter 5 : This chapter concludes the thesis and a few suggestions for further work are discussed.

—*—

CHAPTER TWO

A SURVEY OF SYSTEM DESCRIPTION LEVELS AND LANGUAGES

Computer system description can be classified as behavioural, functional or structural description (1) . Another way of classification given by Bell and Newell (2, 3) is PMS, program, logic and circuit level description. The languages describing the systems can be procedural or nonprocedural (1). A brief survey of these areas is presented here. Further some of the high level languages are also presented discussing their various features. (1,2,3,7,11,21,25 etc.)

2.1 Behavioural, Functional and Structural Descriptions:

In a system description, several levels of details can be used. They range from behavioural description (in which properties of the system are specified in terms of the input/output relationship between variables - a black box approach) to structural descriptions (where the system is described in terms of the real hardware components and their interconnections). Intermediate functional descriptions represent the system in terms of the actual components and their functional relationship or algorithm.

Behavioural descriptions are closer to the conventional programs in most programming languages. Complex expressions and operations are allowed for simplicity in the description. Variables

and operators donot necessarily have a hardware counterpart, and timing details are ignored. Concurrency is also not taken into account because the only purpose is to describe the behaviour of the system. Work done so far for this level is very limited. This is equivalent to program level discussed in the next section.

Functional descriptions are closer to the real hardware. They describe the system as an algorithm in terms of the real registers components of the machine. The operators may or may not be hardware primitives and expressions can be of complicated nature. Timing and concurrency is taken into account. The ISP notation suggested by Bell and Newell falls into this type.

Structural descriptions represent the system in terms of the hardware components. Operators have hardware counterparts (i.e. they are primitives) and the descriptions tend to be more detail than the other two levels. Being closer to physical implementation, timing is described in terms of clock pulses or event completed signals. All register transfer languages fall into this category.

2.2 Various Levels of Description :

Alternatively a system can be completely described at any one of the four levels,viz. circuit, logic, program and PMS, if the set of elements constituting the system, the interconnections and the information transfer between elements are specified. Each

level of description has certain set of primitives or basic elements. Generally primitives in one level are subsystems in the lower level. Logic level can be further divided as switching circuit level and register transfer level. Lower levels upto switching circuit level are standardised. Register transfer level is expected to get standardised within next few years. Here only levels above register transfer level are discussed.

2.2.1 Register Transfer Level

The components of this level are registers, clock, data operators and functional transfers between registers. Sometimes arithmetic circuits are also used as elements. Subsystems are described by both combinatorial logic networks and registers. The blocks and subsystems can be used to obtain other complex blocks and subsystems. The information transfer from one register to other register can be simple with or without modification. The transfers are activated by control signals and clock pulses. There are many languages proposed at this level and a few of them have been implemented successfully (1,7,11,12,13,20,21,23,27,29,31). Languages at this level give the structural description of the system. A brief survey of register transfer languages is presented in the next section.

2.2.2 : Program Level :

This is not only a unique level of description for digital technology (as is the logic level) but is uniquely associated

with digital computers, namely, with those digital devices that have a central component that interprets a programming language. There are many uses of digital technology in instrumentation and controls which do not require such an interpretation device and hence have a logic level but no program level. Thus program level is uniquely associated with digital computers only.

Components of program level are memory cells, instructions, operators, controls, and interpreter. The memories hold data structures which represent things both inside and outside the memory. The operations take various data structures as inputs and produce new data structures, which again reside in memories. Thus behaviour of the system is the time pattern of data structures held in its memories. The unique feature of the program level is the representation it provides for combining components, that is, for specifying what operations are to be executed on what data structures. Each instruction specifies that a given operation (or operations) be executed on specified data structures. Superimposed on this is a control structure that specifies which instruction is to be interpreted next. Normally this is done in the order in which the instructions are given, with jumps out of sequence specified by branch instructions.

There is no unique representation for programming level. Each computer has its own instruction set that is different from that of other computers. Bell and Newell (2,3) developed a new

notation called ISP (Instruction Set Processor) which is described in brief in the next section, to provide a uniform way of describing instruction set of the existing computers and also that of the future. They tried to develop it at program level but it gives the description somewhere in between program and register transfer level. ISP description is a functional description of the system. However it has been extended to describe computational expressions as in high level languages like FORTRAN and ALGOL.

Program level description of a system is supposed to give its behavioural description. Once a language for describing a computer system at this level is available then we can write an interpreter for it. This will facilitate in simulating the behaviour of the computer system.

2.2.3 PMS Level (Processor Memory Switch)

This is the topmost level of describing computer systems. At PMS level (2,3) computer systems can be described in terms of primitives like processors, memories, switches, transducers, controls, links, data operators and peripherals. Such a description of a system is diagrammatic. Information flow is indicated by making use of thick lines. Using such a primitive set, the components like computers and computer networks evolve out. This level exists informally. It is the view taken of a computer system when its most aggregate behaviour is considered. It is possible to evaluate

the gross properties of a computer system at this level. There is substantial amount of work done in simulation and design of systems which incorporate multiprocessing, multiprogramming, time sharing with large I/O devices, computer networks etc., at this level. The operating characteristics of the primitives are costs, memory capabilities, information flow rates, power etc. There is no uniform language at this level and even no standard name as such.

2.3 Procedural and Non-Procedural Languages :

Any computer system description language can be either procedural or non-procedural (1). Non-procedural languages tend to impose many restrictions on the user. The sequence of operations (the algorithms) must be described by providing the timing and the conditions to execute the operations. This kind of detail is irrelevant if the designer only wants to describe algorithms in terms of the I/O sequences, without any consideration to the actual clock pulses, or state register values. The examples of such kind are CDL (7), DDL (11), DSDL(21) etc.

Procedural languages are better suited for behavioural descriptions. The algorithm is described as a sequence of steps as in a conventional programming languages and the details about the timing and the conditions can be ignored. Procedural languages are capable of describing the system using conditional statements. The conditions are labels used in nonprocedural languages. Examples of

the procedural languages are FORTRAN-like language proposed by Metze and Seshu (25) and ISP (2,3).

With all the above background, the objectives of the thesis are clear. Now we proceed to the next section in which some high level languages are briefly surveyed.

2.4 High Level Computer System Description Languages :

This section is divided into three subsections viz, RT languages, languages similar to conventional programming languages and ISP notation. Each of them are briefly presented in the following pages.

2.4.1 RT- Languages :

There are so many RT languages proposed out of which a few have been successfully implemented and are being used in the design of digital systems. Examples are CDL (7), DDL (11), DSDL (21), AHPL (17), LOCS (34) etc. They are all nonprocedural languages. They describe the system at structural level. All of them are developed for design purpose, i.e. design automation (6), and not for description (documentation) purpose. These languages are not powerful enough to describe the larger digital systems like computers in a concise and precise manner. The description becomes too lengthy. While describing a digital system, register transfer languages descend down one level below to describe particular pieces of hardware. Thus the languages are not purely at RT level.

2.4.2 Languages similar to conventional programming languages :

There have been a few proposals to describe the computer system at its structural level using the languages similar to other conventional programming languages like FORTRAN, ALGOL, PL/I etc. But these languages are not suitable for hardware systems because of their special nature. There have also been some efforts towards using FORTRAN as a simulation language for digital systems. ALGOL and PL/I provide facilities like block structure feature and labelling which do not exist in FORTRAN. All of these languages are useful to a limited extent for describing digital system at its behavioural or structural level because these languages are developed for computational purposes. Moreover they do not have terminology used in digital systems. Again the facility to deal with parallel operations, timing and control signals, and sequencing information is totally non-existent which is useful in design simulation.

A FORTRAN like computer design and description language is suggested by Seshu and Metze (25). The language consists of two parts : global description and control part. In digital systems subcontrols can operate in parallel such subcontrols which operate in parallel are declared in global description. Some constants are also defined in global part, which can be used in the other parts of the description synonymously, so that just by changing the global description one can alter the design keeping other parts

of the program same. The global description also contains design constraints like cost, speed etc. Control part is further subdivided into main control and subcontrols, similar to main program and subroutines in Fortran. Subcontrol represents a hardware block. Examples are subcontrol ARITH, subcontrol DECODE etc., which reflect arithmetic and decoder hardware counterparts respectively. Systems library approach is introduced to help in design of digital systems. They have suggested writing systems compiler, for such an input language, which will translate it into some intermediate language. This is hardware independent part. Further the intermediate language output of the systems compiler according to them can be translated to implementation details using systems library approach, by logic compiler. The main purpose of the language has been to automate the design process. They tried to do it but without success. A description (program) written according to this proposal of Sheshu and Metze is self documenting and it reflects the machine organization. It is not, however, easy to understand such a system description which is a high level structural description. To have an automated system of design, as proposed by them, it is necessary to have a rich systems library which contains all types of designs of component digital systems. It is not easy to have such a library. Again, the whole design can be asynchronous only.

2.4.3 . Instruction-Set-Processor (ISP) :

The ISP descriptive scheme suggested by Bell and Newell (2,3) gives the informal description of the computer system. It is

meant to provide a uniform way of describing instruction sets at functional level of description. It takes concurrency into account by using symbols "next" and ";" . Expressions can be complicated. Again timing details are ignored. Thus it is certainly above RT level. At program level sequencing is achieved by executing instruction by instruction with the jumps out of the sequence by branch instructions or procedure calls. In ISP it is achieved by "next" and ";" allowing concurrent operations. Thus ISP is not at program level. Therefore we can say that it lies in between Program and RT level. An interpreter for ISP as such can not be implemented. It is necessary to investigate some simulation language which will put ISP as an operational tool. It is only functional description of the system. But to understand these ISP descriptions of the computer systems, it is necessary to get familiar with various symbols used and various rules of descriptions. It is not similar to other conventional programming languages; moreover it is notational. Bell and Newell have described many existing computer systems using ISP. It is useful as a description language. But it is necessary that the notation ISP must become formal programming language so that analysis and synthesis procedures can be carried on automatically.

In brief the description is like this :

The instruction set of the computer is described by using instruction expressions which have the form :

< condition > → < action sequence >

The condition describes when the instruction will be evoked, and the action sequence describes what transformations of data takes place between what memories. The operator (\rightarrow) is control operator.

Modification of memory bits in memory cell has the form :

< memory-expression > \leftarrow <data expression >

The operator (\leftarrow) is transmit operator. Left side describes the memory location where the right side (data-expression) is stored.

With this background and objectives and requirements of the high level language in mind, we are in a position to develop such a language (Computer System Description Language- CSDL) which is described in the next chapter.

- * -

CHAPTER THREE

COMPUTER SYSTEM DESCRIPTION LANGUAGE

The Computer System Description Language described in this chapter is capable of describing the behaviour of the system at program level. The computer systems TDC-316, IBM 1800 and IBM 7C44 are described in CSDL in appendices I, II and III respectively. In the first section of this chapter CSDL is described informally and in the second section its syntax specifications are given using BNF notation (16) .

3.1 The Language

Any CSDL program or a description of the computer system has the following format.

- | | | |
|---------------------------------|---|---------------|
| (1) System declaration |) | Heading |
| (2) Memory elements declaration | } | Body or Block |
| (3) Procedure declaration | | |
| (4) Statement part | | |

Each of them is described in details below.

Character set :

The language has the following sets of characters.

- (1) Letters : All capital letters A to Z
- (2) Digits : All decimal digits 0 to 9

(3) Special characters :

+ - / *) (≠ = { [] [^ v → ↑ <
 , ⊖ ⊙ ⊥ ⊥ ← ⊥ ⊥ ; > : °
 ↓ ⊕

3.1.1 System declaration :

This is the heading of the program. System declaration gives the identification of the system to be described

Example,

SYSTEM TDC-316

Here SYSTEM is the key word and TDC-316 is the system to be described.

3.1.2 Memory elements declaration :

This part consists of Register declaration, Memory declaration, Array and Equivalent declarations, and Integer declaration. All processor registers, primary memory and integer variables that are referenced to in the following parts of the program are defined under this declaration. This is similar to that in the language Pascal (33) .

(a) Register declaration :

A register is an ordered set of flipflops and each stores one bit of information. Flipflops and switches can be considered as one bit registers. Register 'n' bits in length can be represented as R(0:n-1) or R(n-1:0) or R(1:n) according to the convention used. Integer prior to ":" represents Most Significant Bit (MSB), whereas integer following ":" represents Least Significant Bit (LSB).

Register arrays are represented as $XR(1:3;0:15)$. Here part prior to ";" indicates dimension of the array XR and part following ";" is the size of each element of the array (similar to above example $R(0:n-1)$). Single bit registers (flipflops and switches) are represented by means of identifiers only.

Example,

```
REGISTER      A(0:15),      XR(1:3;0:15),S
```

Here Accumulator A , array XR and switch S are declared as registers. If there are more than one declaration then they are separated by commas.

In addition, the language provides another way of representation or combination of both. The above declaration $XR(1:3;0:15)$ can also be represented as $XR(1,2,3;0:15)$. This facilitates in declarations like $XR(1,2,4; 0:15)$, $AC(Q,P,1:35)$ etc. Here index registers 1,2 and 4 and accumulator of 37 bits (Q,P and 1 to 35) are declared.

Part of register can be defined as a subregister and this facilitates frequent reference to these selected sequences of bits. Subregisters do not exist at all as separate hardware registers. It is only convenient naming for frequent referencing. The use of a subregister makes it easier to identify a part of a register which usually provides a meaningful indication of the function, that the part of register performs.

Example,

```
SUBREGISTER    OP(0:4) = CR(0:4),
                TAG(0:1) = CR(5:6)
```

Here OP and TAG are subregisters declared under the key SUBREGISTER. Right hand side of the declaration is the identifier declared earlier in REGISTER declaration. Left part and right part have got the same syntax as explained above.

Concatenation register gives a name to the concatenation of two or more registers or subregisters declared earlier. This also does not exist as a separate hardware register but provided for convenience while describing the system.

Example,

```
REGISTER    A(0:15), Q(0:15)
CONCAT    AQ(0:31) = A°Q
```

Here '°' is the concatenation operator and AQ is the single 32 bit register formed by A and Q. Again both right and left parts of the declaration have similar syntax as explained above.

(b) Memory declaration :

A memory in a digital computer system can be regarded as an array of registers capable of storing information which can be accessed. The registers are often regarded to as the locations of the memory. The address register contains the memory location address to be read or written as the case may be.

Memory declaration is similar to register array declaration. Similar to SUBREGISTER declaration, SUBMEMORY declaration is also there. In this declaration part syntax is same.

Example,

```
MEMORY    M(0:32768; 15:0)
SUBMEMORY M1(0:8191; 15:0) = M(0:8191; 15:0)
          M2(0:8191; 15:0) = M(8192:16383; 15:0) etc.
```

In the above example, 'M' is the main memory, whereas M1 and M2 are submemories or memory modules. Here part prior to ";" gives the capacity of the memory in number of words and following part gives the memory word format.

(c) Arrays and Equivalent declaration :

In some computer systems part of core memory is used for processor registers. In such cases processor registers are firstly declared under ARRAY declaration if they are in arrays. And then under Equivalent declaration each element of the array and other processor registers if they are there, are equated to actual corresponding memory locations as explained below :

Example,

```
Memory    M(0:32767;15:0)
ARRAY    GPR(1:7;15:0)
EQUIVALENT  GPR(1) = M(32752),
             GPR(2) = M(32753) and so on.
             PC = M(32762) etc.
```

In above example, memory location 32,752 is taken as GPR(1), 32,753 as GPR(2) and so on. Processor register PC is memory location 32,762.

(d) Integer declaration :

In this declaration part integer variables used in the program are defined.

Example,

```
INTEGER    Z, ZZ, Z1 .
```

3.1.3 Procedure Declaration :

Program body consists of memory elements declaration, procedure declaration and statement part. Procedure may or may not have memory elements declaration part. But statement part is compulsory for a procedure. Procedure can also call another procedure. The memory elements declared in main body are global to any procedure declared in it, and those declared in a procedure are local to it and can be referenced within a scope of that procedure only.

Example,

```
PROCEDURE      EFFADDR(Z)
```







This procedure is declared to calculate effective address.

3.1.4 Statement Part :

(a) Basic Operators :

The function to be carried out by a logic network during one or more clock period is represented by a symbol which corresponds to an operator. Basic operators are those that are very frequently used. They can be classified as logical, functional and arithmetic. The following table gives the operators, symbols used in description and the type of the operation.

Operator	Symbol	Type
Logical		
NOT	\neg	Unary
OR	\vee	Binary
AND	\wedge	"
Exclusive-OR	\oplus	"
NOR	\downarrow	"
NAND	\uparrow	"

Operator	Symbol	Type
Functional		
Shift Left		Unary
Shift Right		"
Count Up		"
Count Down		"
Circulate Left		"
Circulate Right		"
ARITHMETIC		
Addition	+	Binary
subtraction	-	"
Multiplication	*	"
Division	/	"

(b) Expressions and Statements :

Using above operations in combination we can get logical or arithmetic expressions. Syntax of statement is explained in next section. Use of parenthesis can be made to avoid ambiguity while forming the expressions. Thus complicated expressions are combination of these basic operations. Logical or arithmetic statements can be obtained by equating an identifier to the logical or arithmetic expressions respectively. This is equivalent to register transfers with or without any modification.. Similarly we can initialize registers which are already declared. For example, A=0. This will initialize register A to all zeros.

Relational expressions (rather conditions) are formed by two identifiers separated by relational operators like $>$, $<$, $=$ and \neq .

(c) Compound Statement :

The compound statement specifies that its component statements be executed in the same sequence as they are written. The symbols BEGIN and END act as statement brackets .

Example,

```
IF(¬SKIPCOND) THEN BEGIN
                    I=Z+1
                    M(Z)=I
                    END
```

Here if SKIPCOND=0 then BEGIN...END block is executed otherwise control is transferred to next sequential instruction. The block includes two simple statements $I = Z+1$ and $M(Z) = I$ which are executed serially.

(d) Control Statements :

Some familiar control statements are included in CSDL.

These statements enable to describe the behaviour of the system at program level. It is one of the primitives for program level. They are explained below.

(I) Conditional Statements:

A conditional Statement, IF or CASE (decoder operation) statement, selects single statement of its component statements for execution. The IF statement specifies that a statement be executed only if a certain condition is true, if false then either no statement (in this case control is transferred to next sequential statement) or the statement following the symbol ELSE is executed. For logical

conditions, the convention is, if the value of the logical expression is 1 then it is true, otherwise false.

The two forms of IF statement are :

```
IF <Condition> THEN <Statement>
& IF <CONDITION> THEN <Statement>
    ELSE <Statement>
```

The <Condition> can be logical or relational expression.

If <Statement> is combination of more than one statement then it is <compound statement>. <Statement> can be a procedure call.

Examples,

```
(i) IF (RUN) THEN CR(0:1) = M(I)°M(I+1)
(ii) IF (F) THEN I= I+2 ELSE I = I+1
(iii) IF (¬IA) THEN Z= ADDR + XR(T)
        ELSE BEGIN
            Z1 = ADDR + XR(T)
            Z = M(Z1)
        END
(iv) IF (CR(9)=1) THEN BROINT
```

In example (iv) BROINT is procedure call. In first three examples conditions are logical and in fourth one condition is relational.

CASE Statement :

The case statement consists of an expression (Selector) and a list of component statements, each being labelled by a constant of the type of the type of the selector. In CSDL it is integer represented in Octal. It selects for execution the statement whose label is equal to the current value of the selector. This is equivalent to decoder GO TO statement in FORTRAN IV. Upon completion of that

statement, control is transferred to the end of the CASE statement
i.e. CASEND.

The form of the statement is :

```

CASE    <expression>  OF
    <Case-label list> : <Statement>
    <Case-label list> :  -<Statement>
    .....
    .....
    <Case-label list> : <Statement>
CASEND

```

Here <Statement> is compound statement.

Example,

```

CASE      OP      OF
30 : BEGIN
      A= M(Z)
      END
.....
.....
.....

32 : BEGIN
      AQ = A*M(Z)
      END
CASEND

```

(II) Iterative Statements :

Some cases like interpreter cycle, shift process etc. are repeated more than one time while describing the behaviour of the system. Repetitions are continued until certain condition is satisfied or for fixed number of times. Such a repetitive execution of sequence of statements for a definite number of times is achieved by introducing two statements of the following type.

(i) REPEAT UNTIL Statement :

The form of the statement is :

```
REPEAT <Compound Statement> UNTIL <Condition>
```

The sequence of statements constituting compound statement is executed until the condition is true. It stops iterating as soon as condition becomes false.

Example,

```
REPEAT  BEGIN
        IR = M(PC)
        INSTRXEQ
        PC = PC+2
      END
UNTIL   (STOP= 0)
```

Above example represents interpretation process. As soon as STOP becomes 1 it stops iterating.

(ii) FOR statement :

The form of the statement is :

```
FOR <Control variable> := <initial value> To <final value> DO
    <Compound Statement>
```

This statement indicates that a statement be repeatedly executed while a progression of values is assigned to the control variable of the FOR statement.

Example,

```
FOR  K=1 TO 8 DO
    BEGIN
        PB = PB + A(1)
         $\downarrow$  A
    END
```

<final value> can be integer variable or register value declared earlier.

(e) Procedure Calls :

This is equivalent to procedure in the language Pascal(33). Procedure itself may call other procedure provided the called procedure is not in the domain of calling procedure. When there is a call to a particular procedure, the control is transferred to that procedure. After completing execution of the called procedure, control is again transferred back to the next sequential statement.

Example,

EFFADDR(Z)

Execution of this statement causes the transfer of control to EFFADDR procedure. After completion of execution of EFFADDR procedure, control is transferred back to the next statement of the calling procedure.

(f) Input-Output :

Two input-output statements are included. One is READ statement which reads the card from the indicated device into the given memory location. Other one is WRITE statement, which writes on the indicated device from the given memory location.

Examples,

```
READ <device addr.> , M(Z)
WRITE <device addr.> , M(Z)
```

Timing and concurrency are not taken into account as the language CSDL is only for behavioural description of the computer systems at program level.

4.2 SYNTAX OF THE LANGUAGE :

It is essential for any language to have concise and compact syntactic specifications, i.e. grammar. For the production or recognition of the allowable strings in the language rules can be formulated according to its specifications. For this purpose Backus Naur Form (BNF) notation is used to specify the syntactic specification of the CSDL. (16) .

4.2.1 Basic Elements :

The basic elements of the syntax specification are terminal and nonterminal (also called as syntactic entities) symbols. The terminal symbols are grouped into three categories viz. letters, digits and special characters. In BNF they can be represented as:

<letter>:: = A|B|C|D|E|F|G|H|I|J|K|L|M|N|O|P|Q|R|S|T|U|V|
W|X|Y|Z|

< digit > :: = 0|1|2|3|4|5|6|7|8|9

< Special Character >:: = +|-|/|*|)|(|.|=|<|>|{|}|[|]|^|_|~|`|'| |
⊕|⊗|⊙|+|↑|;|,|>|<|°|:

The basic building blocks of the language are identifiers and integer constants. Their syntax is :

<identifier>:: = <letter>|<identifier>|<letter>|<identifier>
<digit>

<integer>:: = <digit>|<integer> <digit>

4.2.2 System declaration :

< System declaration > :: = SYSTEM <identifier>

Here onwards square brackets will be used to indicate that the contents are optional while braces will be used to indicate repetitions of the contents as required.

4.2.3 Memory elements declaration :

(a) Register declaration :

< register declaration > :: = REGISTER < name 1 > {, < name 1 > }

$$\begin{aligned}
 &\langle \text{name 1} \rangle :: = \langle \text{identifier} \rangle (\langle \text{name 2} \rangle ; \langle \text{name 2} \rangle) \mid \langle \text{identifier} \rangle \\
 &\langle \text{name 2} \rangle :: = \left[\begin{array}{c} \langle \text{identifier} \rangle \\ \text{or} \\ \langle \text{integer} \rangle, \end{array} \right] \langle \text{integer} \rangle : \langle \text{integer} \rangle \left[\begin{array}{c} \langle \text{identifier} \rangle \\ \text{or} \\ \langle \text{integer} \rangle \end{array} \right] \\
 &\quad \left| \begin{array}{c} \langle \text{identifier} \rangle \\ \text{or} \\ \langle \text{integer} \rangle \end{array} \right\{ \begin{array}{c} \langle \text{identifier} \rangle \\ \text{or} \\ \langle \text{integer} \rangle \end{array} \}
 \end{aligned}$$

< subregister declaration > :: = SUBREGISTER < name 1 > = < name 1 >
 { < name 1 > = < name 1 > }

< concat register declaration > :: = CONCATREG < name 1 > = < name 1 > ° < name 1 >
 {, < name 1 > = < name 1 > ° < name 1 > }

(b) Memory declaration :

< memory declaration > :: = MEMORY < name 3 >

< name 3 > :: = < identifier > (< name 2 > ; < name 2 >)

< submemory declaration > :: = SUBMEMORY < name 3 > = < name 3 >
 {, < name 3 > = < name 3 > }

(c) Array and Equivalent declarations:

< array declaration > :: = ARRAY < name 3 > {, < name 3 > }

< eqvt. declaration > :: = EQUIVALENT < name 1 > = < name 3 >
 {, < name 1 > = < name 3 > }

(d) Integer declaration :

< integer declaration > ::= INTEGER < identifier > { , < identifier > } .

4.2.4 Procedure declaration :

< procedure declaration > ::= . PROCEDURE < proc. identifier > [(< arg. list >)]

< procedure identifier > ::= < identifier >

< arg. list > ::= < identifier > { , < identifier > }

Syntax for procedure call is

< procedure call > ::= < procedure identifier > [(< arg. list >)]

4.2.5 Statement part :

< statement part > ::= < compound statement >

< compound statement > ::= BEGIN < statement > { < statement > }

END

< statement > ::= < compound statement > | < logical statement > |

< arithmetic statement > | < functional statement > |

< control statement > | < set constant statement >

< logical statement > ::= < name 1 > = $\begin{bmatrix} \text{< name 1 >} \\ \text{or} \\ \text{< name 4 >} \end{bmatrix}$ < logical operator >

< name 1 >

or

< name 4 >

< logical operator > ::= $\neg | \vee | \wedge | \oplus | \uparrow | \downarrow$

< arithmetic statement > ::= $\begin{matrix} < name 1 > & < name 1 > \\ \text{or} & = & \text{or} \\ < name 4 > & < name 4 > \end{matrix}$ < arith. operator >

< name 1 >

or

< name 4 >

CASE < name 1 > OF

< case-label list> :< compound statement>

< case label list> :< compound statement>

CASEND

< case label list> :: =< name 4> | < case label list> < name 4>

< name 4> :: = 0|1|2|3|4|5|6|7

< I/O statement> :: =< operation> (< device address>), < name 3>

< operation> :: = READ|WRITE

< device address> :: = < integer> | < identifier>

- * -

CHAPTER FOUR

EXAMPLES AND JUSTIFICATIONS

The example systems selected to demonstrate the usefulness of the language CSDL as a documentation language are TDC 316 ,⁽³²⁾ IBM 1800⁽¹⁸⁾ and IBM 7044⁽¹⁹⁾, which are presented in appendices I, II and III respectively. These describe their behaviour at programming level. Each of these systems is discussed in brief in the following sections.

4.1. TDC-316 -

This is a third generation computer system having integrated circuits technology. It has 28K words core storage (user accessible), which is divided in four modules of 8, 8, 8 and 4K each. Each word is further divided in two bytes of 8 bits each. It is byte addressable. Processor registers like GPR sets, Program counter, Processor status register, stack limit register etc. occupy the part of core storage. (4K) (Thus total 32K core storage). CSDL allows such descriptions by means of its ARRAY AND EQUIVALENT declarations. Memory, Processor, Console, instruction, data and address formats etc. are described using memory elements declarations of CSDL. Then various procedures like effective address calculation, instruction execution etc. are described in procedure declaration part. At the end statement part of the main program i.e. interpretation cycle of TDC-316. follows.

4.2 IBM 1800 :

This is also a third generation computer system. It has 16K words core memory. Each word consists of 18 bits. Here two bits P and S are added as parity and storage protection bits. Memory, Processor, instruction formats, IOCC (input-output control code) format etc. are described in memory elements declaration part. Various procedures like effective address calculation, instruction execution, IOCC execution etc. are described in procedure declaration part. At the end interpretation cycle of IBM 1800 follows.

4.3 IBM 7044 :

This is a second generation computer system. It has 32K words of 36 bits each, core storage. Memory, Processor, console, instruction and data formats etc. are described in memory elements declaration. Various procedures like effective address calculation, instruction execution etc. are described and then at the end interpretation cycle of IBM- 7044 follows.

In all the above systems the general format of description is same. Once one system description is understood completely then it is easy to follow that of others. This shows the consistency in descriptions. The language does not take into account concurrent processes in hardware instead they are represented serially. This is because the language is meant to give only behavioural description of the system. The whole description of the system looks like a single program.

4.4. Justifications :

Looking back to our objectives set before, the language is procedural one. It is capable of describing the behaviour of the computer system at program level. It is used successfully to document the existing computer behaviour at program level. It is precise, concise and elegant. It is easy to understand. The language is similar to other programming languages like Pascal, Algol etc. Therefore it is easy to learn and remember also. While describing the systems addition of necessary comments make the description more readable. The language has got few primitive programming concepts and they are used consistently while describing the systems. This makes the language simple and familiar. It is independent of any machine, organization, hardware technology etc. The language has got the terminology similar to hardware systems. Description of the computer system using CSDL is easily understandable. The language allows memory element declarations of complicated nature. Almost each and every element in memory element declaration is an array. The language has the primitives like memory cells, instructions, operators, controls, and interpreter, which are the primitives for the program level while describing the behaviour of the system. It describes the system with regard to input-output relationships, ignoring intermediate register transfers. Thus it gives behavioural description of the system also. Addition of control statements make it procedural.

As far as powers of CSDL are considered, it is capable of describing any computer system to the extent that possible by ISP description. Moreover adding input-output instructions in the language make it possible to read from or write on any device that is provided for the computer system. This will be useful in its one of the applications i.e. systems simulator, when some data is to be inputted or outputted. The language is closer to ISP. CSDL gives the behavioural description while ISP gives functional description taking concurrency into account. CSDL can be implemented on existing computers whereas ISP as such can not be. Descriptions in ISP are notational while in CSDL they are descriptive to some extent. ISP gives informal description of the system whereas CSDL gives formal description. Any ISP description can be translated into CSDL which will describe the behaviour of the system.

Though other conventional programming languages like Pascal, Algol etc. can be used to simulate the behaviour of the computer system, they are not suitable for documenting the computer system, because these languages are developed essentially for computation purposes, they do not have terminology used in digital system description, and using these languages description of computer elements and basic operations is not feasible. Whereas CSDL is capable of describing the computer system using terminology similar to that in digital systems and has got the required basic operations set. Moreover, the same description can be used as an input to the generalised simulator which further simulates that system on the source computer. Thus while describing the computer system using CSDL, its simulator is also ready.

CHAPTER FIVE

CONCLUSIONS

The Computer System Description Language proposed in this thesis is developed for describing the present and future computer systems' behaviour at programming level. The usefulness of the language is demonstrated by describing the present computer systems TDC 316, IBM 1800 and IBM 7044. The language is also useful as an input language to the systems simulator which will simulate the target computer system, described in CSDL, on the source computer at instruction level. Then starting with "Bootstrap Technique" one can develop the software for the target machine. Thus the further step is to write the systems simulator for which input language will be CSDL.

It is significant to state here that there is current research going on in Register Transfer Modules (RTMs). (4) . Efforts are being made to standardise the set of RTMs which can be used to implement any control operation. Thus once the RTMs set is defined, then with some changes in CSDL like concurrency, the language will be useful as design language. The task can then be automated by writing a program which will accept revised CSDL as an input language and give out the computer system implementation details with inter-connections between various modules. (Complete Wiring diagram).

When such an integrated system will be ready then it can be used as a good research tool in design, as a teaching aid and for development of software for any proposed computer as soon as its specifications are laid down.

The language proposed is formal and is like other conventional programming languages. It has familiar control statements like IF... THEN... , IF... THEN... ELSE... & the CASE statement which is equivalent to decoder operation. It includes compound statement like BEGIN...END. Iterations are handled by use of REPEAT... UNTIL...and FOR loops. The language is easy to learn and remember . The descriptions using CSDL are easy to understand.

- * -

REFERENCES

- (1) Barabacci, M.R., "A comparison of register transfer languages for describing computers and digital systems ", IEEE, Trans. on Computers, Vol. C-24. No.2, Feb. 1975, PP 137-150.
- (2) Bell, C.G., and A. Newell, "Computer Structures: Readings and Examples ", McGraw Hill Book Co., 1971.
- (3) Bell, C.G., and A. Newell, "The PMS and ISP Descriptive Systems for Computer Structures", AFIPS, SJCC, 1970, P.351.
- (4) Bell, C.G., and J. Grason, "The RTM design concept ", Computer Design, Vol. 10, PP 87-94, May 1971.
- (5) Breuer, M.A., "A survey of design automation", Computer Journal, 1972.
- (6) Breuer, M.A., "General Survey of the design automation of digital computers ", Proc. IEEE Vol. 54, PP. 1708-1721, 1966.
- (7) Chu, Y., "An ALGOL like computer design language", CACM, Vol. 8, Oct. 1965, PP. 607-615.
- (8) Chu, Y., "Introduction to Computer Organization.", Prentice Hall Inc., Englewood Cliffs., N.J., 1970.
- (9) Chu, Y., "Computer Organization and Microprogramming ", Prentice Hall Inc., Englewood Cliffs., N.J., 1972.
- (10) Crockett, E.D., and et. al., "Computer aided system design ", AFIPS, FJCC, 1970, P-287.
- (11) Duley, J.R., and D.L. Dietmeyer, "A digital system design language (DDL)" , IEEE Trans. on Computer, Vol. C. 17, Sept. 1968, PP 850-861.
- (12) Duley, J.R., and D.L. Dietmeyer, "Translation of a DDL digital system specification to Boolean equations ", IEEE Trans. on Computer, April, 1969, PP. 305-318.
- (13) Eckhouse, Jr., R.H., "A high level microprogramming language (MPL) ", AFIPS, SJCC 1971, P. 169.
- (14) Falkoff, A.P., Iverson, K.E., and Sussenguth, E.H., "A formal description of system/360 ", IBM Systems J., Vol. 3, PP 198-262, 1964.

- (15) Gerald, G.B., "Digital system design automation - A method for designing a digital system as a sequential network system.", IEEE Trans. on Computer, 1968, PP: 1044-1061.
- (16) Gries, D., "Compiler Construction for Digital Computers". John Wiley and Sons Inc. 1971.
- (17) Hill, F.J., and G.R. Peterson, "Digital Systems : Hardware Organization and Design ", Wiley, New York, 1973.
- (18) "IBM-1800 Functional Characteristics "- IBM Systems Reference Library, File No. 1800-01, Form A 26-5918-7.
- (19) "IBM 7040-7044 Principles of Operation"- IBM Systems Reference Library, File No. 7040/7044-01, Form A22-6649-6.
- (20) Iverson, K.E., "A Programming Language ", Wiley, New York, 1962.
- (21) Isloor, S.S., "A Syntax Directed Interpreter For Digital System Design Language ", M. Tech. Thesis, Computer Science Program, I.I.T. Kanpur, July, 1975.
- (22) Kanodia, R.K., "Software for a small on line computer", M.Tech. Thesis, Electrical Engg., I.I.T. Kanpur, August, 1975.
- (23) Krishnamurthy, S.G., "Digital System Simulation and Design Language (DSDL) ", M. Tech. Thesis, Electrical Engg., I.I.T. Kanpur, August, 1973.
- (24) Kutzberg, J.M., and et. al., "Computer design automation: What now and what next ? " AFIPS, FJCC, Vol. 33, Part 2, 1968, PP : 1499-1503.
- (25) Metze, G., and Seshu, S., "A proposal for computer compiler ", AFIPS, SJCC, 1966, P. 253.
- (26) Nori, K.V., "Introduction to compiler construction", NCSDCT, TIFR, BOMBAY, August 1975.
- (27) Proctor, R.M., "A logic design translator experiment demonstration relationships of language to systems and logic design " IEEE Trans. on Computer, Vol. EC-13, August 64, PP-422-430.

- (28) Rajaraman, V., and T. Radhakrishnan, "An introduction to digital computer design ", Prentice Hall of India, New Delhi, 1975.
- (29) Schalappi, H.P., "A formal language for describing machine logic, timing and sequencing (LOTIS) ", IEEE Trans. on Computer, P. 439, 1964.
- (30) Shinghal, R., "Simulation of TDC-12 on IBM. 704", M.Tech. Thesis, Electrical Engg., I.I.T. Kanpur, June 1968.
- (31) Stabler, E.P., "System Description Languages", IEEE Trans. on Computer, Dec. 1970, PP : 1160-1173.
- (32) "System TDC-316- Trading Manual " Computer Group, ECIL, Hyderabad, Sept., 1974.
- (33) Wirth, N., and K. Jensen, "Manual for learning the language PASCAL " Zurich, April 1974.
- (34) Zucker, M.S., "LOCS : An EDP machine logic and control simulator ". IEEE Trans. on Computer 1965, P : 304.

APPENDIX I

TDC - 316 CSDL DESCRIPTION

{ Braces are used for comments in the following description }

SYSTEM TDC-316 { Heading }

{ MEMORY }

MEMORY M(0:32767; 15:0)

{ 32K words core memory, of which first 28K is user accessible. Remaining 4K words are reserved for processor registers, I/O registers and Rom modules. Here MSB is bit '15' and LSB is bit '0' }

SUBMEMORY MD1(0:8191;15:0) = M(0:8191;15:0)
MD2(0:8191;15:0) = M(8192:16383;15:0)
MD3(0:8191;15:0) = M(16384:24575;15:0)
MD4(0:4095;15:0) = M(24576:32767 ;15:0)

{ User accessible core (28K) is further divided in 4 modules of 8,8,8 and 4K each. }

{ PROCESSOR }

{ There are 15 GPRs of which 3 are reserved for Program counter, User stack Pointer and Supervisor stack pointer. Remaining GPRs are divided as set '0' and Set '1' GPRs }

ARRAY GPR(1:7), GPR1(1:7)

EQUIVALENT	PC = M(32752),	{ Program Counter }
	GPR(1) = M(32753),	{ Supervisor Stack Pointer }
	GPR1(1) = M(32761),	{ User Stack Pointer }
	{ Set '0' }	{ Set '1' }
	GPR(2) = M(32754),	GPR1(2) = M(32762),
	GPR(3) = M(32755),	GPR1(3) = M(32763),
	GPR(4) = M(32756),	GPR1(4) = M(32764),
	GPR(5) = M(32757),	GPR1(5) = M(32765),
	GPR(6) = M(32758),	GPR1(6) = M(32766),
	GPR(7) = M(32759),	GPR1(7) = M(32767),

{ Above two sets can be used as an accumulator, index register, stack pointers, and locations for temporary storages }

PS = M(32736), { Processor status register }
 SL = M(32738), { Stack limit register }
 MQ = M(32739), { Multiplier-quotient register }
 SR = M(32737), { Switch register }
 SC = M(32751) { Shift counter }

REGISTER STOP₂ PARITY-ENABLE-FLAG,
 C,S,Ø, Z {Condition Codes}

INTEGER ZZ, Z1, Z2, Z3, PCT, D, S

{ CONSOLE }

REGISTER CPUST (17:0), { 15 lamps to indicate various CPU states }
 PWR, { Power ON/OFF switch }
 BUSADDR (17:0) { Bus-address register display }
 DATAPEG (17:0), { Data Register Display }
 SWREG (17:0), { Switch register }
 CADRSEL (4:0), { Console address select knob }
 CONTRSW (10:0) { Control Switches }

{ INSTRUCTION FORMAT }

REGISTER IR(15:0) { Instruction Register }
 SUBREGISTER DST(5:0) = IR(5:0), { destination field }
 SRC(5:0) = IR(11:6), { source field }
 REGD (2:0) = IR(2:0), { destination register }
 MODED(2:0) = IR(5:3), { destination mode }
 REGS(2:0) = IR(8:6), { Source Register }
 Modes(2:0) = IR(11:9) { Source mode }

{ Double Operand Class }

SUBREGISTER OPD(3:0) = IR(15:12) { OP-code }

{ Single Operand Class }

SUBREGISTER OPS(9:0) = IR(15:6) { OP code }

{ Branch Class }

SUBREGISTER SINDIS (7:0) = IR(7:0), { signed displacement }
 OPB(7:0) = IR (15:8) { OP-Code }

{ Condition Code Setting and Miscellaneous Operational Class }

SUBREGISTER OPO(15:0) = IR(15:0) { OP-Code }

{ Subroutine Linkage Class }

SUBREGISTER LINKR(2:0) = IR(8:6), { Linkage Register }
 OPSBL(6:0) = IR(15:9) { Subroutine Linkage op-code }

{ Trap Class }

SUBREGISTER TRPRG(7:0) = IR(7:0) , { Trap Argument }
 OPTR (7:0) = IR(15:8) {Op-code }

DATA FORMAT

Z is integer variable

SUBREGISTER DATA (14:0) = M(Z, 14:0), { data Part }
 SW = M(Z, 15), {Sign bit of the word }
 HIGHBYT(15:8)=M(Z,15:8), { Higher byte }
 SHB = M(Z, 15), { Sign bit }
 DATAH (14:8) =M(Z,14:8), { data part }
 LOWBYT(7:0) = M(Z,7:0), { Lower Byte }
 SLB = M(Z,7), { Sign bit }
 DATAL (6:0) = M(Z,6:0) { data Part }

{ ADDRESS FORMAT }

REGISTER ADDRWRD (15:0) { address word }
 SUPREGISTER B = ADDRWRD(0), {Byte-manipulation bit }
 ADDR(15:1) = ADDRWRD(15:1) { Word address }

{ LSB of Address word (ADDRWRD) is a bit 'B', which is used in
 byte manipulation instructions only. If B = 0 then lower byte
 (7:0) of the word is selected and if B=1 then higher byte(15:8)
 of the word is selected }

{ EFFECTIVE ADDRESS CALCULATION }

PROCEDURE EFFADDR (MODE,REG, ZZ)

BEGIN

IF(PC-MODE) THEN PCMADDR { Processor-mode of addressing }
 ELSE GPRMADDR { GPR- mode of addressing }

END

PROCEDURE GPRMADDR { GPR-mode of addressing }

BEGIN

{ Direct Addressing }

CASE MODE OF

000: BEGIN { Register Operand }

CASE REG OF

1: BEGIN ZZ = 32753
 2: BEGIN ZZ = 32754
 3: BEGIN ZZ = 32755
 4: BEGIN ZZ = 32756
 5: BEGIN ZZ = 32757
 6: BEGIN ZZ = 32758
 7: BEGIN ZZ = 32759

CASEEND

END

001: BEGIN { Register Increment }

ZZ = GPR(REG)
 GPR(REG) = GPR(REG) + 2

END

002: BEGIN { Register decrement }

ZZ = GPR(REG)
 GPR(REG) = GPR(REG) - 2

END

{ Indexed Addressing }

003: BEGIN

ZZ = GPR (REG) + M(PC+2.)

END

{ Deferred Addressing }

004: BEGIN

ZZ = GPR(REG) { Register addressing }

END

005: BEGIN

{ deferred register increment }

Z1 = GPR(REG)
ZZ = M(Z1)
GPR(REG) = GPR(REG) + 2

END

006: BEGIN

{ deferred register decrement }

GPR(REG) = GPR(REG) - 2
Z1 = GPR(REG)
ZZ = M(Z1)

END

007: BEGIN

{ deferred indexed }

Z1 = M(PC + 2)
Z2 = GPR(REG)
Z3 = Z1 + Z2
ZZ = M(Z3)

END

CASEND

ADDRWRD = ZZ

ZZ = ZZ/2

END

PROCEDURE

PCMADDR

{ Processor mode of addressing }

BEGIN

CASE MODE OF

001 : BEGIN

{ Immediate }

ZZ = PC
PC = PC + 2

END

003: BEGIN { Relative}

ZZ = M(PC) + PC

PC = PC + 2

END

005: BEGIN { absolute}

ZZ = M(PC)

PC = PC+2

END

007: BEGIN { deferred relative}

Z1 = M(PC) + PC

ZZ = M(Z1)

END

CASEND

ADDRWRD = ZZ

ZZ = ZZ/2

END

{ INSTRUCTION EXECUTION }

{ Following procedure executes the instruction }

PROCEDURE INSTRXEQ

{ This procedure calls different procedures depending upon bits of IR }

IF(IR(15:03) = 0) THEN OPRCL {Operational Class}

ELSE

IF(IR(15:03) = 1) THEN RTRSUB { Return from Subroutine}

ELSE

IF(IR(15: 6) = 0) THEN ADDCL {additional class}

ELSE


```

IF( IR(15:6) =1) THEN CONDSET      { Condition code setting }
      ELSE

IF( IR(15:7) =3) THEN TRAP          { Trap }
      ELSE

IF( IR(15:8) =1) THEN IOTRAP        { I/O Trap }
      ELSE

IF( IR(15:8) =2) THEN EMUTR         { Emulator Trap }
      ELSE

IF( IR(15:9) =3) THEN SUBLNK        { Subroutine Linkage }
      ELSE

IF( IR(15:12)=1) THEN BRANCH        { Branch Class }
      ELSE

IF( IR(15:12)=0) THEN SINGOPR       { Single operand class }
      ELSE      DOUBOPR      { Double operand class }

END

PROCEDURE      DOUBOPR      { Double Operand Instruction execution}

REGISTER BD, BS      {Byte manipulation bits for destination
                      source operands}

CONCAT          EDBS = BD°BS

BEGIN

      EFFADDR (MODED, REGD, D)      {destination effective address}

      BD = B

      EFFADDR (MODES, REGS,S)      {Source effective address}

      BS = B

```

```

CASE OFD OF                                { OPD is double operand op-code }
O2 : BEGIN                                { Set Bit : STB }

      M(D) = M(D) V M(S)

END

O3 : BEGIN                                {Set byte : BSTB}

      CASE EDBS OF

        O0 : BEGIN  M(D; 7:0) = M(D; 7:0) V M(S;7:0) END
        O1 : BEGIN  M(D; 7:0) = M(D; 7:0) V M(S; 15:8)END
        O2 : BEGIN  M(D;15:8) = M(D;15:8) V M(S;7:0)  END
        O3 : BEGIN  M(D;15:8) = M(D;15:8) V M(S;15:8) END

      END

      { Above byte manipulation instruction is illustration. Hereafter
        byte manipulation instructions are not explained in details.}

O4 : BEGIN                                { Compare : CMP }

      M(D) = M(S) - M(D)

      BEGIN

        IF(M(D) < 0) THEN S=1 ELSE S=0
        IF(M(D) = 0) THEN Z=1 ELSE Z=0
        IF(CARRY=1) THEN C=0 ELSE C=1
        IF(OVFL= 1) THEN  $\phi$ =1 ELSE  $\phi$ =0

      END

      END

O5: {Byte Compare : BCMP}                  {Same as CMP for Byte}

O6: BEGIN                                {Test Bit : TSB}

      M(D) = M(S) ^ M(D)

      BEGIN

         $\phi$  = 0
        IF(M(D) = 0) THEN Z=1 ELSE Z = 0
        IF(M(D;15)=1) THEN S=1 ELSE S= 0
      END

      END

```

07 : {Byte Test Bit : BTSB } {Same as TSB for Byte}

10 : BEGIN {Multiply : MPY}

$$M(D) \circ MQ = M(S) * MQ$$

END

11 : BEGIN {Divide : DVD}

$$MQ \circ M(D) = (M(D) \circ MQ) / M(S)$$

END

12 : BEGIN {Transfer : TSR }

$$M(D) = M(S)$$

END

13 : {Byte Transfer : BTSR }

14 : BEGIN { add: ADD }

$$M(D) = M(D) + M(S)$$

END

15 : BEGIN { Subtract : SUB }

$$M(D) = M(D) - M(S)$$

END

16 : BEGIN { Clear Bit : CLB }

$$M(D) = M(S) \wedge M(D)$$

END

17 : { Clear byte : BCLB }

CASEND

END

PROCEDURE SINGOPR

{ Single Operand class instruction
execution process

BEGIN

EFFADDR (MODES, REGS, D)

LIBRARY
CENTRAL LIBRARY

Acc. No. 46953

```

IF(IR(11:10) = 1) THEN SINGOPRRS      {Single Operand Rotate Shift}
      ELSE SINGOPRGL      {Single Operand General}

```

```

LND

```

```

PROCEDURE SINGOPRGL

```

```

      CASE OPS OF      {OPS(9:0) = IR(15:6) : OP-code}

```

```

60: BEGIN M(D) = 0 AND      {Clear : CLR}

```

```

61: {Byte clear : BCLR}

```

```

62: BEGIN      {test : TST}

```

```

      BEGIN

```

```

      IF(M(D) = 0) THEN Z = 1 ELSE Z = 0

```

```

      IF(M(D) < 0) THEN S = 1 ELSE S = 0

```

```

      C = 0

```

```

      CL = 0

```

```

      END

```

```

END

```

```

63 : {Byte Test : BTST }

```

```

64 : BEGIN      { Increment : INC }

```

```

      M(D) = M(D) + 1

```

```

      END

```

```

65 : {Byte increment : BINC }

```

```

66 : BEGIN      { Add Carry : ADC }

```

```

      M(D) = M(D) + C

```

```

      END

```

```

67 : {Byte Add Carry : BADC }

```

```

70 : BEGIN      { Decrement : DEC }

```

```

      M(D) = M(D) - 1

```

```

      END

```

```

71 : {Byte Decrement : BDEC }

```

```

72 : BEGIN      { Subtract Carry : SBC }

```

```

      M(D) = M(D) - C

```

```

      END

```

```

73 : {Byte Subtract Carry : BSBC }

```

```

74 : BEGIN                                { negate : NEG }
      M(D) = M(D) + 1
      END

75 : { Byte Negate : BNEG }

76 : BEGIN                                { Complement : CDM }
      M(D) = ~M(D)
      END

77 : { Byte Complement : BCOM }
CASEND

PROCEDURE SINGOPRSR                      { Single Operand Shift Rotate }
CASE OPS OF                             { OPS = Single Operand Group Op-code }
40: : BEGIN                               { Rotate Right : ROR }
      COM(D)
      END

41 : { Byte Rotate Right : BROR }

44 : BEGIN                               { Rotate Left : ROL }
      COM(D)
      END

45: { Byte Rotate Left : BROL }

46 : BEGIN                               { Long Rotate Left : LROL }
      COM(D)OMQ
      END

47 : BEGIN                               { Long Rotate Right : LROR }
      COM(D)OMQ
      END

50: : BEGIN                               { Arithmetic Shift Right : ASR }
      M(D)OC
      M(D;IS) = M(D;L4)
      END

51 : { Byte arithmetic Shift Right : BASR }
52 : BEGIN                               { Long Arithmetic Shift Right : LASR }
      FOR I = 1 TO SC DO
        BEGIN

```

$\leftarrow M(D) \circ MQ \circ C$

$M(D;15) = M(D;14)$

END

END

54 : BEGIN {Logical Shift Left : LSL}

$\leftarrow C \circ M(D)$

$M(D;0) = 0$

END

55 : {Byte Logical Shift Left : BLSL }

56 : BEGIN {Long Logical Shift Left : LLSL }

FOR I = 1 TO SC DO

BEGIN

$\leftarrow C \circ M(D) \circ MQ$

$MQ(0) = 0$

END

END

57 : BEGIN {Long Normalize : LNMI }

SC = 0

REPEAT

BEGIN

$\leftarrow M(D) \circ MQ$

SC = SC + 1

END

UNRIL ($\leftarrow M(D;15) = M(D;14)$)

END

03 : BEGIN {Interchange byte:INIB }

FOR I = 1 TO 8 DO

BEGIN

$\leftarrow M(D)$

END

END

02 : BEGIN {Jump : JMP}

PC = M(D)

END

CASEND

PROCEDURE BRANCH { Branch Class }

{First 7 bits are op-code & remaining 8 bits represent}

{Signed displacement OPB(7:0) = IR(15:8),XX(7:0)=IR(7:0);

CASE OPB OF

```

100: BEGIN { Branch on count non zero : BRCH }
      SC = SC - 1
      IF(SC ≠ 0) THEN PC = PC + 2*XX
      END

104: BEGIN { Branch on zero clear or Branch on not }
      equa: BRZC (BRNE) }

      IF(Z=0) THEN PC = PC + 2*XX
      END

110: BEGIN { Branch on greater or equal : BRGE }
      IF(C↑ ≠ 1) THEN PC = PC + 2*XX
      END

114: BEGIN {Branch on greater than : BRGT }
      IF(Z ∧ (C ≠ 1) = 0) THEN PC = PC + 2*XX
      END

120: BEGIN { Branch unconditional: BRN }
      PC = PC + 2*XX
      END

121: BEGIN { Branch on Zero Set : BRZS }
      IF(Z=1) THEN PC = PC + 2*XX
      END

130: BEGIN { Branch on less than :BRLT }
      IF(S ≠ 1) THEN PC = PC + 2*XX
      END

131: BEGIN { Branch on less than or equal 10:BRLE }
      IF((S ≠ 1) ∧ Z=1) THEN PC = PC+2*XX
      END

```

```

140 :   BEGIN                                { Branch on plus or sign clear : BRSC(BRPL) }
        IF(S=0) THEN PC=PC+2*XX
        END

141 :   BEGIN                                { Branch on overflow clear : BROC }
        IF(OV= 0) THEN PC = PC + 2*XX
        END

150 :   BEGIN                                { Branch on Carry Clear : BRCC }
                                           { or Branch on higher or same : BRHS }
        IF (C=0) THEN PC = PC + 2*XX
        END

151 :   BEGIN                                { Branch on Higher : BRHI }
        IF(C > Z = 1 ) THEN PC = PC + 2*XX
        END

160 :   BEGIN                                {Branch on Sign Set or minus}
                                           { BRSS ( BRMI ) }
        If(S=1) THEN PC = PC + 2*XX
        END

161 :   BEGIN                                {Branch on overflow Set : BROS}
        IF (OV= 1 ) THEN PC = PC + 2*XX
        END

170 :   BEGIN                                {Branch on Carry Set : BRCS
                                           "      " Lower : BRLO}
        IF ( C = 1 ) THEN PC = PC + 2*XX
        END

171 :   BEGIN                                { Branch on lower or Same : BRLS}
        IF ( CVZ = 0 ) THEN PC = PC + 2*XX

```


END

CASEND

PROCEDURE SUBLNK { Subroutine Linkage }

{ OPSBL = IR (15:9) is already tested }

SUBREGISTER RLINK (2:0) = IR(8:6)

BEGIN

EFFADDR (MODES,REGD,D)

STACK = GPR(RLINK)

GPR(RLINK) = PC

PC = M(D)

END

PROCEDURE EMUTR { Emulator Trap }

BEGIN

STACK = PS { Argument TT = IR(7:0) provides

STACK = PC necessary information for

PC = M(16) Trap SIR }

PS = M(18)

END

PROCEDURE IOTRAP {I-O Trap}

BEGIN

STACK = PS

STACK = PC

PC = M(20)

PS = M(22)

END

```
PROCEDURE TRAP                                { TRAP }
```

```
BEGIN
```

```
    STACK = PS
```

```
    STACK = PC
```

```
    PC = M(8)
```

```
    PC = M(10)
```

```
END
```

```
PROCEDURE COMDSET                            { Condition Code Setting }
```

```
    { OPO = IR(15:0) : OP code }
```

```
BEGIN
```

```
    CASE OPO OF
```

```
101 : BEGIN C = 0 END                        { Clear Carry Bit : CLC }
```

```
102 : "    Ø = 0 "                          { " Overflow Bit : CLO }
```

```
104 : "    Z = 0 "                          { " Zero Bit : CLZ }
```

```
110 : "    S = 0 "                          { " Sign Bit : CLS }
```

```
120 : "    B = 0 "                          { " Break Point Bit: CBFB }
```

```
141 : "    C = 1 "                          { " Set Carry Bit : STC }
```

```
142 : "    Ø = 1 " " "                     { " Set Overflow Bit: STO }
```

```
144 : "    Z = 1 "                          { " Zero Bit : STZ }
```

```
150 : "    S = 1 "                          { " Sign Bit : STS }
```

```
160 : "    B = 1 "                          { " Breakpt. Bit : STBP }
```

```
137 : BEGIN                                { Clear Conditional Codes : CLCC }
```

```
    BEGIN
```

```
        C = 0
```

```
        Z = 0
```

```

        Ø = 0
        S = 0
        B = 0
    END
END

100:    BEGIN                                { No Operation : NOP }
        END
110:    BEGIN    END                        { No Operation : NOP }
CASEEND \
END
PROCEDURE  RTRSUP                          { { Subroutine Return Class }
SUBREGISTER RDST ( 2:0) = IR(2:0)
BEGIN
    PC = GPR (RDST)
    GPR(RDST) = M(SP)
    SP = SP + 2
END
PROCEDURE  OPRCL                          { Operational Class}
    OPO(15:0) = IR(15:0)
CASE  OPO  OF
000: BEGIN    STOP = 1    END                { Processor Halts
                                           : STOP }

001: BEGIN    WAIT = 1    END                { Wait
                                           :WAIT }

002: BEGIN                                { RTI : Exit from intempt
                                           routine or Trap
                                           Service routine }
    PC = STACK
    PS = STACK
END
003: BEGIN                                { Break point Trap : BPT }

    STACK = PS
    STACK = PC
    PC = M(12)
    PS = M(16)

```

END

006:BEGIN {PDB : Parity disable}

PARITY-ENABLE-FLAG = 0

END

007:BEGIN { PEN : Parity enable }

PARITY-ENABLE-FLAG = 1

END

CASEND

END

{ INSTRUCTION INTERPRETATION }

BEGIN

REPEAT

BEGIN

PCT = PC/2

IR = M(PCT)

INSTREQ,

PC = PC+2

END

UNTIL

STOP = 0

END

- * -

APPENDIX II

IBM - 1800 CSDL DESCRIPTION

{ IBM-1800 description in CSDL }

SYSTEM IBM-1800 { Heading }

{ MEMORY }

MEMORY M(0:16383 ; 0:15, P,S)

{ Memory consists of 16K words of 16 bits each. Each word is associated with parity (P) and Memory protect (s) bit, thus making 18 bits words }

{ PROCESSOR }

REGISTER	SAR(0:15),	{ Storage address register }
	I(0: 15),	{ Instruction Register }
	B(0: 15),	{ Storage Buffer Register }
	D(0: 15),	{ Arithmetic Factor Register }
	A(0: 15),	{ Accumulator }
	Q(0: 15),	{ Accumulator Extension }
	SC(0: 5) ,	{ Shift Control Counter }
	OP(0: 5) ,	{ Op-code register holds op-code }
	OV, C,	{ Overflow and Carry indicators }
	XR (1:3;0:15)	{ 3 Index Registers 1,2 and 3 }

INTEGER Z,Z1, ZZ {Integer variables}

{ CONSOLE }

REGISTER	CLEARSTORE, PROG-LOAD,	{Name of switch indicates}
	READY, ON, OFF, POWER,	its use also}
	LAMP-TEST, WAIT, RUN,	
	AIA RM, EMER-PULL, CONSOLE	
	INTERRUPT, LOAD, RESET,	
	IMMEDSTOP, START, STOP	

{ INSTRUCTION FORMAT }

REGISTER CR(0:1; 0:15) {Control register }

SUBREGISTER	OP(0:4) = CR(0;0:4),	{Op-code}
	SHOP(0:7)=CR(0;0:4,5,8,9),	{Shift op-code}
	F =CR(0;5),	{Format: Short or Long }
	T(0:1) =CR(0;6,7),	{Tag Bits : indexing }

```

DISP(0:7) = CR(0; 8:15),      { displacement }
ADDR(0:15) = CR(1; 0:15),    { long instruction address }
IA          = CR(0; 8) ,      { Indirect addressing }
BO          = CR(0; 9) ,      { Branch out }
COND (0:5) = CR(0;10:15)     { Condition }

```

{ IOCC FORMAT }

{ Input Output Control Code instruction format is explained below }

REGISTER IOCC(0:15)

```

SUBREGISTER AREA (0:4) = IOCC (0:4),
FUN (0:2) = IOCC (5:7),
MODIF(0:7) = IOCC (8:15)

```

{ Here AREA gives a unique segment of I/O which may be single device or a group of several devices. FUN gives primary I/O function. MODIF gives the extension OF I/O function code or AREA code }

PROCEDURE EFFADDR (Z)

BEGIN {This procedure calculates the effective address when the instruction in instruction register is being decoded}

IF(T=0) THEN { T = Tag }

BEGIN

IF (F=0) THEN Z = DISP + I { Direct Addressing }
ELSE

IF (IA=0) THEN Z = ADDR { Direct Addressing }
ELSE Z = M(ADDR) { Indirect Addressing }

EIS E END

BEGIN

IF(F=0) THEN Z = DISP + XR(I) {Direct}

ELSE {Direct Addressing}

IF (IA=0) THEN Z = ADDR + XR(T) {Indirect }

ELSE BEGIN Z1 = M(ADDR + XR(T))
Z = M(Z1)

END

END

END

```

PROCEDURE          INSTRXEQ          {Instruction Execution}
SUBREGISTER        TEST(0:3) = IR(0:3)
BEGIN
IF (TEST= 0)       THEN EXECIOCC     {IOCC 2 execute}
IF (TEST= 1)       THEN SHIFTCCL     {Shift cbss}

{ Following part executes the instructions left }

EFFADDR(Z)         { Effective address calculation }
  ZZ = Z + 1

CASE  OP  OP        { OP = Opcode = IR(0:4) }
{ Arithmetic Instructions }

030:  BEGIN          { Load accumulator :LD }
      A = M(Z)
      END

31 :  BEGIN          { Load Acc. and Q : LDD }
      A°Q = M(Z)°M(ZZ)
      END

32 :  BEGIN          { Store accumulator: STO }
      M(Z) = A
      END

33 :  BEGIN          { Store A and Q : STD }
      M(Z)°M(ZZ) = A°Q
      END

20 :  BEGIN          { Add : A }
      OV°C°A = A + M(Z)
      END

23 :  BEGIN          { Subtract double : SD }
      A°Q = A°Q - M(Z)°M(ZZ)
      END

22 :  BEGIN          { Add double : AD }
      A°Q = A°Q + M(Z)°M(ZZ)
      END

24 :  BEGIN          { Multiply: M }
      A°Q = A*M(Z)
      END

25 :  BEGIN          { Divide : D }
      Q = A°Q/M(Z)
      END

```

{ Logical Instructions }

```

34 : BEGIN
      A = A M(Z)           { AND }
    END

35   BEGIN
      A = AV M(Z)          { OR }
    END

-
36 : BEGIN                  { Exclusive OR : EOR }
      A = A + M(Z)
    END

```

{ Compare Instructions }

```

26 : BEGIN                  { Compare : CMP }
      IF (A < M(Z)) THEN I=I+1
      IF (A = M(Z)) THEN I=I+2
    END

27 : BEGIN                  { Double Compare : DCM }
      IF ((A ° Q) < (M(Z) ° M(ZZ))) THEN I = I+1
      IF ((A ° Q) = (M(Z) ° M(ZZ))) THEN I = I+2
    END

14 : BEGIN                  { Load index or instruction counter: LDX }
      IF (T=0) THEN I = ZZ
      ELSE XR(T) = ZZ
    END

15 : BEGIN                  { Store, index or instruction counter: STX }
      IF (T=0) THEN M(ZZ) = I
      ELSE M(ZZ) = XR(T)
    END

05 : BEGIN                  { Store Status : STS }
      IF (F ^ BO = 1) THEN M(Z; P) = COND(15)
      IF (BO=0) THEN BEGIN M(Z; 14:15) = C ° OV
                          C ° OV = 0
                        END
    END

```


{Shift Instructions}

PROCEDURE SHIFTC

BEGIN

IF (T=0) THEN SC(0:5) = CR(0:10:15)


ELSE SC(0:5) = XR(T;10:15)

CASE SHOP OF

020 : BEGIN {Shift left logical : SLA}

FOR Z1 = 1 TO SC DO

BEGIN

 A

END

C = A(SC-1)

END

0.22: BEGIN {Shift double left logical: SLT}

FOR Z1 = 1 TO SC DO

BEGIN

 A°Q

END

C = A(SC-1)

END

030 : BEGIN {Shift right logical : SRA}

FOR Z1 = 1 TO SC DO

BEGIN

 A


END

END

032 : BEGIN {Shift right A & Q : SRT}

FOR Z1 = 1 TO SC DO

BEGIN

 A°Q

END

END

033 : BEGIN {rotate right A & Q : RTE}

FOR Z1 = 1 TO SC DO

BEGIN

A(0) = Q(15)

 A°Q

END

END

```

021 : BEGIN " {Shift left and count A: SLCA}
      IF (T = 0) THEN BEGIN
          FOR Z1 = 1 TO SC DO
              BEGIN
                  ← A
                  C = A(SC-1)
                  END
              END
          ELSE BEGIN
              REPEAT BEGIN
                  ← A
                  SC=SC-1
                  IF(SC=0)THEN STOP=1
                  END
              UNTIL ((→ A(0))V(→STOP))
              STOP= 0
              XR(T;10:15)=SC(0:5)
              XR(T;8:9)=0
              END
          
```

PROCEDURE BROINT { Branch out of Intempt }

BEGIN

IF (SKIPCOND \wedge (\neg F) = 1) THEN BEGIN
 I = I+1
 INTERRUPT = 1
 END

IF ((\neg SKIPCOND \wedge F) = 1) THEN BEGIN
 I = Z
 INTERRUPT = 1
 END

IF (D(15) = 1) THEN OV = 0

END

PROCEDURE EXECIOCC

{This procedure executes IOCC instruction. Here effective address must be even}

BEGIN

EFFADDR(Z)

CASE FUN OF

O1: BEGIN { Memory write operation
 AREA gives I/O device number }
 WRITE (AREA), M(Z)
 END

O2: BEGIN { Memory read operation
 AREA gives I/O device number }
 READ(AREA), M(Z)
 END

CASEND

END

{Statement part of main program}

BEGIN

REPEAT

 BEGIN

 IF (RUN) THEN
 CR(0:1) = M(I) \circ M(I+1)
 IF (F=1) THEN I = I+2
 ELSE I = I+1

 END

UNTIL (STOP = 0)

END

APPENDIX III

IBM - 7044 CSDL DESCRIPTION

{ Following is the CSDL description of IBM 7044 }

SYSTEM IBM-7044 { Heading }

{ Memory }

MEMORY M(0:32767; S,1:35)
{32K words core memory of 36 bits word each. 'S' is
sign bit}

{ Processor }

REGISTER AC(S,Q,P,1:35) { 38 bits Accumulator }

SUBREGISTER ACS(S,1:35) = AC(S,1:35), { signed AC word }
ACL(P,1:35) = AC(P,1:35), { logical AC word }
P = AC(P); { carry for AC (1:35) }
Q = AC(Q); { carry for AC(P,1:35) }
S = AC(S); { sign bit }
ACQP(Q,P,1:35) = AC(Q,P,1:35)

REGISTER MQ(S,1:35) {Multiplier Quotient}

CONCAT ACMQ(S,Q,P,1:71) = AC°MQ(1:35)
{double word accumulator}

REGISTER SI(0:35), {sense indicators for floating point
instructions}
XR(1,2,4;3:17), {index registers 1,2 and 4 or
A,B and C }
IC(3:17), {instruction location counter }
RUN, {indication whether machine is
executing }
DIVCK, {divide check }
ACOVFL, { Accumulator overflow }
MQOVFL, { MQ overflow }
IOCK, { Input output check }
AR(1:15) { Address register }

INTEGER Z, ZD

{ Console }

```

REGISTER      KEYS(0:35),      { console data }
               SENSESW(0:5),   { sense switches}
               SENSELT(0:3)    { sense lights }

```

{ Instruction Format }

```

REGISTER      IR(S,1:35)      { Instruction register }
               Y(1:15)=IR(21:35), { address part: word address }
               T(1:3) =IR(18:20), { Tag: XR to use 1,...7.}
                                   { '0' means no indexing}
               F(1:2) = IR(12:13), { Indirect addressing bits}
                                   { If F(1:2)=11 then indirect}
               OP(S,1:11) = IR(S,1:11)  OP-code

```

{ Data Format }

```

REGISTER      SR(S,1:35)      { storage register}

SUBREGISTER   SL(S,1:35) = SR(S,1:35), {logical data: unsigned
                                           integer :boolean vector }
               SX(S,1:35) = SR(5,1:35), { single precision fixed point
                                           sign bit of SX }
               SKSGN = SR(S),
               SXMAG(1:35) = SR(1:35), { magnitude of SX}
               SF(S,1:35) = SR(S,1:35), { single precision floating pt.}
               SFSGN = SR(S),           { sign of SF }
               SFEXP(1:8) = SR(1:8),    { exponent part}
               SFMANT(0:26)= SR(9:35)   { mantisa part}

EQUIVALENT    DF(0:1;S,1:35) = M(Z)°M(Z+1) { Double precision
                                           floating pt.}

SUBREGISTER   DFSIGN = DF(0;S)          { sign bit}
               DFEXP(1:8)= DF(0;1:8)    { exponent part}
CONCAT        DFEMANT(0:537)= DF(0;9:35)°DF(1;9:35) { mantisa part}

```

{Following procedure calculates Effective Address}

PROCEDURE EFFADDR(Z)

BEGIN

```

      ADDR(ZD)      {This procedure calculates direct address}
      IF(F(1:2)=3) THEN BEGIN
                     IR = M(ZD)      {Indirect Addressing}
                     ADDR(ZD)
                     Z=ZD
                     END
      ELSE

```

```

Z = ZD                      { Direct addressing }
END

```

```

PROCEDURE ADDR(ZD)

```

```

    { Here multiple tags are used to calculate effective address }

```

```

        CASE T OF
0: BEGIN ZD = Y END
1: BEGIN ZD = Y- XR(1) END { Index reg. 1 or A }
2: BEGIN ZD = Y- XR(2) END { Index reg. 2 or B }
3: BEGIN ZD = Y-(XR(1)V XR(2)) {index reg. 1 & 2 }
4: BEGIN ZD = Y- XR(4) END { Index reg. 4 or C }
5: BEGIN ZD = Y-(XR(1)VXR(4)) END {Index reg.1 & 4 }
6: BEGIN ZD = Y-(XR(2)VXR(4)) END {Index reg.2 & 4 }
7: BEGIN ZD = Y-(XR(1)VXR(2)VXR(3)) {Index reg.1 & 2 & 3 }
CASEEND

```

```

END

```

```

PROCEDURE INSTRXEQ                      { Instruction Execution }

```

```

EFFADDR(Z)                      { Effective address calculation }

```

```

CASE OP OF

```

```

{ Arithmetic Instructions }

```

```

+0361 : BEGIN                      { add and carry logical word: ACL }
        ACL = AC + M(Z)
        END

```

```

+0400 : BEGIN                      { add algebraic : ADD }
        AC = AC+M(Z)
        END

```

```

+0767 : BEGIN                      { accumulator left shift: ALS }
        FOR I=1 TO SC DO
        BEGIN ACQP END
        END

```

```

+0771 : BEGIN                      { accumulator right shift: ARS }
        FOR I=1 TO SC DO
        BEGIN
        ↓ ACQP
        END

```

```

-500 : BEGIN      { clear and add logical : CAL }
      AC=0
      ACL=ACL+M(Z)
      END

+500 : BEGIN      { clear and add Acc: CLA }
      AC=0
      ACS=AC+M(Z)
      END

+502 : BEGIN      { clear and subtract : CLS }
      AC=0
      AC=AC-M(Z)
      END

+0221: BEGIN      - { divide or proceed: DVP }
      ACMQ=ACMQ/M(Z)
      END

+0420: BEGIN      { Halt and Proceed: HPR }
      RUN=0
      END

--
+0560: BEGIN      { load MQ : LDQ }
      MQ=M(Z)
      END

-0763: BEGIN      { logical left shift: LGL }
      FOR I=1 TO SC DO
      BEGIN
       $\leftarrow$  ACMQ $\circ$ MQ
      END
      END

-0765 : BEGIN      { logical right shift: LGR }
      FOR I=1 TO SC DO
      BEGIN
       $\rightarrow$  ACQP $\circ$ MQ
      END
      END

+0763 : BEGIN      { long left shift : LLS }
      FOR I=1 TO SC DO
      BEGIN
       $\leftarrow$  ACQP $\circ$ MQ(1:35)
      END

```

```

+0765 : BEGIN                                { long right shift : LRS}
        FOR I=1 TO SC DO
        BEGIN
            1 ACQP=MQ(1:35)
        END

+0200 : BEGIN                                { Multiply : MPY}
        ACMQ=MQ*M(Z)
        AC(Q,P)=0
        END

-0773 : BEGIN                                { Rotate MQ left :RQL}
        FOR I=1 TO SC DO
        BEGIN
            1 MQ
        END

+0602 : BEGIN                                {store logical word: SLW}
        M(Z) = ACL
        END

+0621 : BEGIN                                {store address: STA }
        M(Z)=AC(21:35)
        END

+0622 : BEGIN                                {store displacement: STD}
        M(Z) = AC(3:17)
        END

-0625 : BEGIN                                { store instruction location counter:STL}
        M(Z)=IC
        END

+0601 : BEGIN                                { store: STO }
        M(Z)=ACS
        END

-0600 : BEGIN                                { store MQ :STQ }
        M(Z)=MQ
        END

-1000 : BEGIN                                { store location and trap : STR }
        M(0)=0
        M(0)=IC
        MC=M(Z)
        END

```



```

-
-0000 : Similar to STR
+0000 :      "      "
+0600 : BEGIN                                { Store zero : STZ }
      M(Z)=0
      END

+0402 : BEGIN                                { Subtract: SUB }
      AC= AC-M(Z)
      END

-0120 : BEGIN                                {Transfer on minus : TMI}
      IF(AC(S)=1) THEN IC=Z
      END

-0100 : BEGIN                                {Transfer on no zero: TNZ, }
      IF(A ≠ 0) THEN IC=Z
      END

+0120 : BEGIN                                {Transfer on plus : TPL}
      IF(AC(S)=0) THEN IC=Z
      END

+0140 : BEGIN                                {Transfer on overflow : TOV}
      IF(ACOVF) THEN BEGIN
                        ACOVF=0
                        IC=Z
                        END
      END

+0020 : BEGIN                                {Transfer: TRA}
      IC=Z
      END

-
-1627 : BEGIN                                {Transfer and store instruction location
      M(Z)=IC                                           counter: TSL}
      IC=Z+1
      END

+0100 : BEGIN                                { Transfer on zero : TZE }
      IF(AC=0) THEN IC=Z
      END

0522  : BEGIN                                { Execute : XEC }
      INSRXEQ(Z)
      END

```

{ Logical Operations }

```

-0320 : BEGIN                                { AND to Accumulator : ANA}
        ACL=ACL ^ M(Z)
        AC(S,Q)=0
        END

+0340 : BEGIN                                {Compare Accumulator with storage:CAS}
        IF( AC < M(Z)) THEN IC=IC+2
        IF( AC =M(Z)) THEN IC=IC+1
        END

-0340 : BEGIN                                {logical compare ACC. with storage: LAS}
        IF(ACQP < M(Z)) THEN IC=IC+2
        IF(ACQP= M(Z)) THEN IC=IC+1
        END

-0501 : BEGIN                                {OR to Accumulator : ORA }
        ACL=ACL V M(Z)
        END

```

Extended Performance Set

```

+0774 : BEGIN                                { Address to index true : AXT }
        XR(T)=Y
        END

+0535 : BEGIN                                { Load complement of address in index: LAC }
        XR(T)=¬M(Y;21:35)+1
        END

-0535 : BEGIN                                { Load Complement of Decrement in index: LDC }
        XR(T)=¬M(Y;3:17)+1
        END

+0534 : BEGIN                                { Load index from address: LXA }
        XR(T)=M(Y;21:35)
        END

-0534 : BEGIN                                { Load index from Decrement: LXD }
        XR(T)=M(Y;3:17)
        END

+0737 : BEGIN                                { Place complement of address in index:PAC}
        XR(T)=¬ AC(21:35)+1
        END

```

```

+0734 : BEGIN                                {Place address in index : PAX}
        XR(T) = AC(21:35)
        END

-0737 : BEGIN                                {Place Complement of Decrement
        XR(T) = AC(3:17) + 1                in Index: PDC}
        END

-0734 : BEGIN                                {Place Decrement in Index: PDX}
        XR(T) = AC(3:17)
        END

+0754 : BEGIN                                {Place Index in Address: PXA}
        AC=0
        AC(21:35) = XR(T)
        END

-0754 : BEGIN                                {Place Index in Decrement : PDX}
        AC=0
        AC(3:17) = XR(T)
        END

+0634 : BEGIN                                {Store Index in Address: SXA}
        M(Y; 21:35) : XR(T)
        END

-0634 : BEGIN                                {Store Index in Decrement: SXD}
        M(Y; 3:17) = XR(T)
        END

+0074 : BEGIN                                {Transfer and Set Index : TSX}
        XR(T) = IC+1
        IC=Y
        END

```

{Character Handling Operations}

```

-1341 : BEGIN
        CASE IR(15:17) OF
        0: BEGIN                                {Compare character with storage: CCS}
            IF(AC(30 : 35) = M(Z;S,1:5)) THEN IC= IC+1
            IF(AC(30:35) < M(Z;S,1:5)) THEN IC = IC+2
            END
        1: BEGIN                                CCS
            IF(AC(30:35) = M(Z;6:11)) THEN IC=IC+1
            IF(AC(30:35) < M(Z;6:11)) THEN IC=IC+2
            END
        END

```

```

2 : {Same as above, with memory location bits 12:17}
3 : { " " " " " " " 18:23}
4 : { " " " " " " " 24:29}
5 : { " " " " " " " 30:35}
6 : BEGIN {Storage minus test : MIT}
    IF (¬M(Z;S)) THEN IC=IC+1
    END
7 : BEGIN {Storage plus test : PLT}
    IF( M(Z;S)) THEN IC= IC+1
    END
CASEEND
END

```

```

- -
-1623 : BEGIN
    CASE IR(15:17) OF
0 : BEGIN {Store Accumulator Character: SAC}
    M(Z;S,1:5) = AC(30:35)
    END
1 : BEGIN {SAC}
    M(Z;6:11) = AC(30:35)
    END
2 : {Same as above with memory location bits 12 : 17}
3 : { " " " " " " " 18 : 23}
4 : { " " " " " " " 24 : 29}
5 : { " " " " " " " 30 : 35}
6 : BEGIN {Make storage sign minus : MSM}
    M(Z;S)=1
    END
7 : BEGIN {Make storage sign plus : MSP}
    M(Z;S)= 0
    END
CASEEND
END

```

```

-1505 : BEGIN {Place character from storage: PCS}
    CASE IR(15:17) OF
0 : BEGIN
    AC(30:35) = M(Z;S,1:5)
    END
1 : BEGIN
    AC(30:35) = M(Z;6:11)
    END

```

```

2 : {Same as above with memory location bits 12:17}
3 : { " " " " " " " " 18:23}
4 : { " " " " " " " " 24:29}
5 : { " " " " " " " " 30:35}
CASEND
END

```

{Data Transmission Instructions}

```

-1704 : BEGIN {Transmit : TMT}
        Z=AC(3:17)
        ZD=AC(21:35)
        REPEAT BEGIN
            M(ZD)=M(Z)
            ZD=ZD+1
            Z=Z+1
            ↓ IR
        END
        UNTIL (IR(28:35)=0)
        END.

```

{Floating Point Instructions}

```

+0300 : BEGIN { Floating point Add : FAD }
        IF(M(Z;S,1:8) > AC(S,1:8)) THEN
            REPEAT BEGIN
                ↓ AC(9:35)°MQ
                ↓ AC(S,1:8)
            END
            UNTIL (M(Z;S,1:8)=AC(S,1:8))
        IF(M(Z;S,1:8) < AC(S,1:8)) THEN
            REPEAT BEGIN
                ↓ M(Z;9:35)°MQ
                ↓ M(Z;S,1:8)
            END
            UNTIL(M(Z;S,1:8)=AC(S,1:8))
        AC(9:35) = AC(9:35)+ M(Z;9:35)
        REPEAT BEGIN {Normalise}
            ↓ AC(9:35)°MQ
            ↓ AC(S,1:8)
        END
        UNTIL (AC(1)≠1)
        END

```

```

-0300 : BEGIN                                { Unnormalised Floating Add: UFA }
      { Same as FAD without normalising the result }
      END

+0302 : BEGIN                                { Floating subtract : FSB }
      IF(M(Z;S,1:8) > A(S,1:8)) THEN
        REPEAT BEGIN
           $\downarrow$  AC(9:35) ° MQ
           $\uparrow$  AC(S,1:8)
        END
        UNTIL (M(Z;S,1:8) = AC(S,1:8))
      IF(M(Z;S,1:8) < AC(S,1:8)) THEN
        REPEAT BEGIN
           $\downarrow$  M(Z;9:35) ° MQ
           $\uparrow$  M(Z;S,1:8)
        END
        - UNTIL (M(Z;S,1:8) = AC(S,1:8))
      AC(9:35) = AC(9:35) - M(Z;9:35)
      REPEAT BEGIN                                { Normalise }
         $\downarrow$  AC(9:35) ° MQ
         $\downarrow$  AC(S,1:8)
      END
      UNTIL (AC(1) ≠ 1)
      END

-302 : BEGIN                                { Unnormalised floating subtract: UFS }
      { Same as FSB without normalising the result }
      END

+0241 : BEGIN                                { Floating divide or proceed: FDP }
      IF(M(Z;9:35) ≠ 0) THEN BEGIN
        AC(9:35) = AC(9:35) / M(Z;9:35)
        AC(S,1:8) = AC(S,1:8) - M(Z;S,1:8)
      END
      END

+0260 : BEGIN                                { Floating Multiply : FMP }
      AC(9:35) ° MQ = AC(9:35) * M(Z;9:35)
      AC(S,1:8) = AC(S,1:8) + M(Z;S,1:8)
      REPEAT BEGIN                                { Normalise }
         $\downarrow$  AC(9:35) ° MQ
         $\downarrow$  AC(S,1:8)
      END
      END

```

```

-0260 : BEGIN                                {Unnormalised Floating Multiply: UFM}
      { Same as FMP without normalising the result }
      END

+0301 : BEGIN                                {Double presision floating add: DFAD}
      { Same as FAD but with two consecutive words
        M(Z) & M(Z+1) with AC and MQ.
        Here sign bit is bit 'S' of Accumulator or M(Z).
        EXPONENT = AC(1:8) or M(Z;1:8) and
        MANTISA  = AC(9:35)°MQ(9:35) or
                  M(Z;9:35)°M(Z+1; 9:35) }
      END

+0303 : BEGIN                                {Double presision floating subtract:DFSB}
      { Same as FSB with above changes in DFAD }
      END

+0261 : BEGIN                                {Double precision Floating Multiply:DFMP}
      { Same as FMP with above changes in DFAD }
      END

-0241 : BEGIN                                {Double Precision Floating Divide or
      Proceed : DFDP }
      { Same as FDP with above changes in DFAD }
      END
      CASEND
      END

{Statement Part}
      BEGIN
      IF(RUN) THEN BEGIN
                  IR=M(IC)
                  IC=IC+1
                  INSTRXEQ
                  END
      END

      END

```

- * -